TABLE OF CONTENTS

GB

DESCRIPTION OF THE APPLIANCE Page 12

CONTROLS Page 13

BEFORE USING THE APPLIANCE Page 14

PRECAUTIONS AND GENERAL SUGGESTIONS Page 14

HOW TO USE THE REFRIGERATOR COMPARTMENT Page 15

HOW TO USE THE FREEZER COMPARTMENT Page 16

HOW TO DEFROST AND CLEAN THE APPLIANCE Page 17

TROUBLE-SHOOTING GUIDE Page 17

AFTER-SALE SERVICE Page 18

INSTALLATION Page 18

DESCRIPTION OF THE APPLIANCE

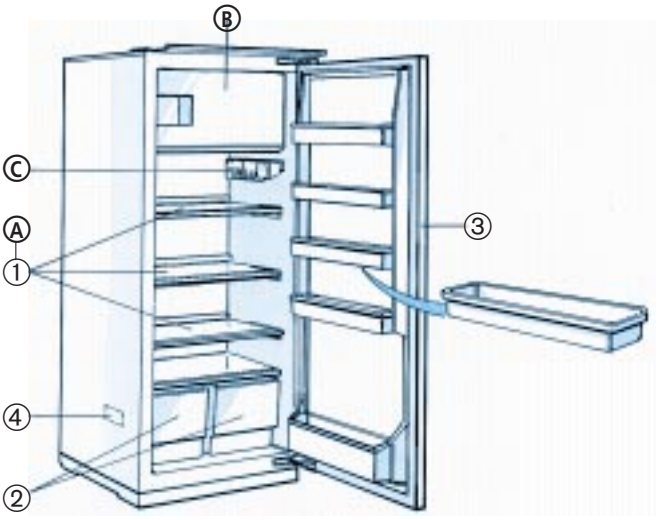

A) Refrigerator Compartment
(for storing fresh food)

1. Shelves (partially adjustable in height)

2. Fruit and vegetables drawers

3. Inside of the door with (if available):
a. Adjustable containers
b. Bottle holder

4. Rating plate

B) Freezer compartment (if available)
(with the ✻✻✻ symbol, for storing frozen food and making ice cubes).

C) Controls

CONTROLS

1. Thermostat knob
2. Light push-button
3. Lamp shield
4. Low temperature pilot light switch to turn the freezer or the low room temperature operation on (if available)
5. Scale marking for temperature setting

BEFORE USING THE APPLIANCE

- After unpacking, make sure that the appliance is undamaged and that the door closes tightly. Any damage must be reported to your retailer within 24 hours after delivery of the appliance.
- **Before connecting the appliance to the power supply, let it stand for 2 hours.**
- The appliance is built with re-usable material. Follow the local disposal regulations.
- Make sure that the installation and the electrical connection are carried out by a qualified technician according to the Manufacturer's instructions and local safety regulations.

PRECAUTIONS AND GENERAL SUGGESTIONS

- Use the refrigerator compartment only for the storage of fresh food and the freezer compartment only for the storage of frozen food, the freezing of fresh food and to make ice cubes.
- Do not cover or close the vents of the appliance.
- Do not place glass containers with liquids in the freezer since they may burst.
- Do not eat ice cubes or ice lollies immediately after taking them out of the freezer since they may cause "cold" burns.
- Before carrying out any cleaning or maintenance, always unplug the appliance or switch the power supply off.
- To avoid the risk of children being trapped and therefore suffocating, do not allow them to play or hide inside the refrigerator.
- The power cable of this appliance may only be replaced by personnel authorised by the Manufacturer since special tools are required.
- The electrical connection and the installation of the appliance must be carried out exactly as specified by the Manufacturer. If you have any doubts, please contact a qualified technician. The local electrical connection specifications must correspond to the rating plate data.
- Do not eat nor drink the contents of the artificial ice blocks.
- All necessary repairs must be carried out by a qualified technician.

Declaration of conformity

- This appliance is designed to store food and conforms to EEC directive No. 89/109.
- This appliance has been designed, built and marketed in compliance with:
  - the safety targets of the "Low Voltage" EEC Directive 73/23
  - the protection requirements of the "EMC" EEC Directive 89/336 amended by EEC Directive 93/68.
- This appliance has been tested for leaks and conforms to VBG 20 safety standards for refrigerating units.
- When scrapping, make the appliance unusable by cutting the power cable off.
- Do not dump the appliance. Take it to the local disposal centre so that the refrigerant may be properly recovered and treated.

Information

- This appliance is free of CFC's (refrigerant circuit contains R134a) or free of HFC's (refrigerant circuit contains R600a – Isobutane). For more details, please refer to the rating plate on the appliance.

  For appliances with Isobutane (R600a)
  The refrigerant Isobutane is a natural gas of high environmental compatibility but which is inflammable. Therefore, it is essential to ensure that the ducts of the refrigerant circuit do not get damaged.

HOW TO USE THE REFRIGERATOR COMPARTMENT

This appliance is either a refrigerator, or a refrigerator with a ✻✻✻ compartment.
The appliance has been designed to run at a room temperature ranging from +10°C to +38°C. For appliances with a ✻✻✻ compartment without pilot light (4), from +16°C to +38°C.

①

①. Getting started

After the appliance has been connected to the power supply, the inside light turns on when the refrigerator door is opened and the thermostat knob is not on position ●. After the temperature has been set, as described below, the appliance is ready for use.

②. To set the temperature:

- Thermostat knob **(1)** on ●: no cooling and light off.
- Thermostat knob **(1)** on **1**: minimum cooling
- Thermostat knob **(1)** on **3-4**: average cooling
- Thermostat knob **(1)** on **7**: maximum cooling

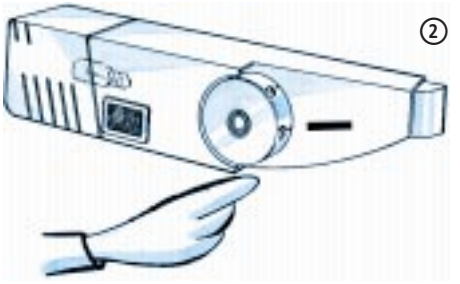
②

Important:
- Press the low temperature pilot light switch **(4)** when room temperature drops **below 16°C**. The low temperature switch (4) turns on.
- When room temperature rises **above 16°C**, turn the low temperature switch **(4)** off.
- Inside temperatures are affected by the position of the appliance, room temperature and frequency of door openings. Thermostat setting **(1)** may have to be changed depending on these factors.
- The thermostat **(1)** has been pre-set to ensure a correct storage of food.

How to store food in the refrigerator compartment

③

③. We suggest to arrange food as shown in the figure on the side:

1. Cooked food
2. Dairy products, tinned products, cheese, butter
3. Fish, meet
4. Fruit and vegetables
5. Small tins, eggs
6. Tubes, small tins
7. Bottles

Notes:
- Do not store food in an open container since it would dry up.
- Do not store food that is still warm in the refrigerator compartment.
- Make sure that air circulates freely between stored food (leave some room between the stored items)..

Defrosting of the refrigerator compartment is completely automatic.

HOW TO USE THE FREEZER COMPARTMENT

Only for appliances with ✱✱✱ compartment:

④ **In the ✱✱✱ freezing compartment it is possible to store frozen food.**

④

Important:

- Wrap and seal food in aluminium foil, cling film, air- and watertight plastic bags, polyethylene containers with lids, containers suitable for freezers.

When buying frozen food, make sure that:

- Wrapper or package is intact as the food may deteriorate. If it bulges or has spots of moisture on it, it means that it has not been stored in adequate conditions and that the contents may have started to thaw.
- Always use thermal bags or cold boxes for transport.
- Frozen food should always be purchased last.
- When at home, immediately store it in the freezer.
- Any food, even if partially thawed, cannot be re-frozen but must be eaten within 24 hours.
- Any rise in temperature of frozen food should be avoided or kept as short as possible. Frozen food should not be kept beyond the date indicated on the package.
- Always follow the instructions on how to store frozen food written on the packaging.

Making ice cubes

- Fill the ice cube trays **(9)** 3/4 full of water and place them on the bottom of the freezer compartment.
- Use the handle of a spoon to free the ice cube trays if they are stuck.

Do not use sharp or pointed tools.

HOW TO DEFROST AND CLEAN THE APPLIANCE

Before carrying out any cleaning or maintenance, always unplug the appliance.
You should defrost the freezer compartment when frost build-up reaches 3 mm in thickness.

- Remove all food from the ******* compartment and turn the thermostat knob to ●.
- Remove all food from the freezer section, wrap it in paper or a blanket and put it in a cool place.
- Periodically clean the inside of the appliance with a sponge dampened in a solution of warm water and neutral pH detergent.
- Rinse and dry.
- Defrosting of the refrigerator compartment is completely automatic.
- (5). Regularly clean the defrost water run-off with the supplied brush so that the defrost water will flow down unhindered. After having cleaned the appliance, plug it in.

Do not use abrasives.

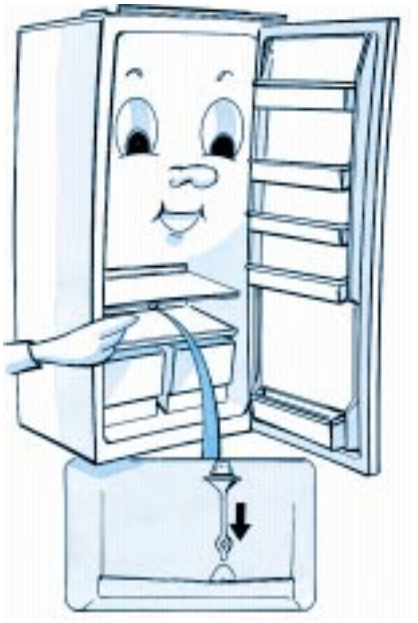

(5)

Long vacation

- Empty the appliance.
- Unplug the appliance.
- Defrost and clean the inside.
- Leave the door open to prevent odour from setting in.

TROUBLE-SHOOTING GUIDE

1. The temperature is not cold enough
- Is the food preventing the door from closing properly?
- Is the thermostat on the correct setting?
- Is air circulation blocked?

2. The temperature in the refrigerator compartment is too cold
- Is the thermostat on the correct setting?

3. The appliance is excessively noisy
- Has the appliance been properly installed?
- Do the pipes on the back touch and rattle?
- **Gurgling noises inside the refrigerating circuit are normal.**

4. The appliance does not work
- Is there a power failure?
- Is the plug properly inserted in the socket?
- Has the fuse blown?
- Is the appliance switched on?

5. There is water on the bottom of the refrigerator compartment
- Is the thermostat on the correct setting?
- Is the defrost water run-off clogged?

6. The inside light does not work (6).
First check point 4, then:
- Unplug the appliance.
- 1. Press the lamp shield's upper and lower sides, as shown in the drawing under **1**.
  2. Remove the lamp shield as shown under **2**.
- Replace the bulb **(220÷240V, 15W)**.
- Temporarily switch the freezer on if the yellow light turns on.

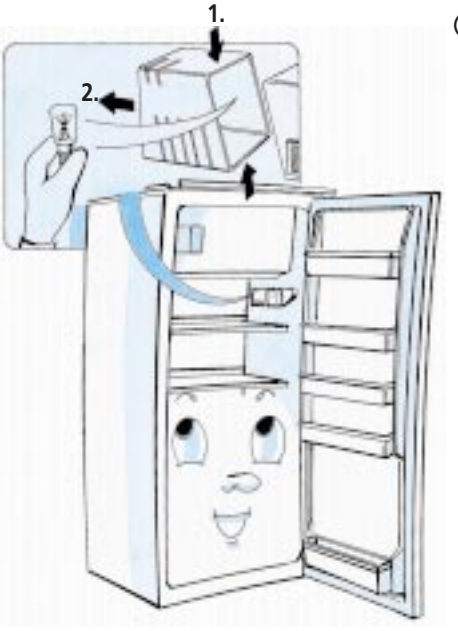

(6)

AFTER-SALE SERVICE

⑦ **If the freezer does not work correctly even after you have consulted the trouble-shooting guide, contact After-Sales Service specifying the service number which is found on the rating plate (inside the freezer at the bottom left) and also in the appliance documentation.**

⑦

INSTALLATION

⑧ Do not install the appliance close to any heat source. High room temperatures, direct sunlight, or location near heating or stoves increase the power consumtion and shoul be avoided. If it is not possible to avoid placing the appliance next to a source of heat, note that the following spacings should be maintained:

to coal oil ovens or heaters 30 cm

to electric cookers/Hotplates 3 cm

- The appliance must be placed in a dry and well-ventilated room.
- Clean the interior (see "DEFROSTING AND CLEANING THE APPLIANCE").
- Assemble the accessories.
- Check the efficiency of the door seal, especially after the appliance has been built in and the door opening direction has been changed.

⑧

Electrical connection

⑨ Check that the voltage on the rating plate **(4)** corresponds to the voltage in your home.

- Appliance earthing is compulsory by law. The Manufacturer shall not be liable for any damage to person or property arising from the failure to comply with this requirement.
- If the plug and the socket are not of the same type, have the socket replaced by a qualified technician.
- Do not use adapters, multiple sockets or extension cables.

Félicitations!
En achetant cet appareil ménager, vous vous êtes décidé pour un produit qui allie les plus hautes qualités techniques au confort domestique.

Dans ce nouvel appareil, tout ce qui a techniquement un sens s'y trouve. Votre appareil est particulièrement économe en énergie. Il vous offre la possibilité de vous conduire en personne soucieuse de l'environnement par un comportement pleinement responsable.

Bonne lecture et ...